



SLOW COOKERS

CROCKPOT MULTICOOKERS



CROCKPOT TURBO EXPRESS MULTICOOKER 5.6L

[Read More](#)

SKU: CROCSC062X

Price: €269.00



CROCKPOT EXPRESS MULTI COOKER 5.6L

[Read More](#)

SKU: CROJP0130

Price: €229.95

25%

€172.46

25%

CROCKPOT SLOW COOKERS



**CROCKPOT TIME SELECT SLOW COOKER
SILVER 5.6L (FOR 6)**

[Read More](#)
SKU: CROJPo66X
Price: €202.95



**CROCKPOT SLOW COOKER SIZZLE & STEW
6.5L (FOR 8)**

[Read More](#)
SKU: CROJPo086
Price: €136.82

40%
€82.09
40%



CROCKPOT SLOW COOKER SIZZLE & STEW 3.5L (FOR 4)

[Read More](#)

SKU: CROJP0085

Price: €103.95



CROCKPOT SLOW COOKER DIGITAL WITH HINGE 3.5L BEIGE & CHROME (FOR 4)

[Read More](#)

SKU: CROJP0014

Price: €119.95



CROCKPOT SLOW COOKER DIGITAL WITH HINGE 3.5L SILVER & ROSE GOLD (FOR 4)

[Read More](#)

SKU: CROJP0013

Price: €119.95



CROCKPOT SLOW COOKER 7.5L SILVER (FOR 10)

[Read More](#)

SKU: CROCSC063X

Price: €223.95



CROCKPOT SLOW COOKER DURACERAMIC WHITE 5.0L (FOR 6)

[Read More](#)

SKU: CROJP0015

Price: €178.45



CROCKPOT SLOW COOKER 2.4L DIGITAL BLACK (FOR 2)

[Read More](#)

SKU: CROJP0003

Price: €89.95



CROCKPOT SLOW COOKER DIGITAL WITH HINGE 4.7L (FOR 5)

[Read More](#)

SKU: CROCSC052X

Price: €144.95



CROCKPOT SLOW COOKER STEEL 3.5L (FOR 4)

[Read More](#)

SKU: CROJP0005

Price: €94.95



CROCKPOT SLOW COOKER DURACERAMIC WHITE 6L (FOR 8)

[Read More](#)

SKU: CROCSC027X

Price: €209.95



CROCKPOT SLOW COOKER AUTO STIR 5.7L (FOR 6)

[Read More](#)

SKU: CROCSC012X

Price: €199.95



CROCKPOT SLOW COOKER RED 3.5L (FOR 4)

[Read More](#)

SKU: CROSCV400RD

Price: €94.95



CROCKPOT SLOW COOKER BLACK/STAINLESS STEEL 5.7L (FOR 6)

[Read More](#)

SKU: CROSCCPBPP605050

Price: €179.95



CROCKPOT SLOW COOKER DIGITAL BLACK 4.7L (FOR 5)

[Read More](#)

SKU: CROSCCPRC507B

Price: €115.95

PARTS & ACCESSORIES



CROCKPOT 5.6L SLOW COOKER LID

[Read More](#)

SKU: CROLID56

Price: €49.00



CROCKPOT 5.7L AUTOSTIR LID

[Read More](#)

SKU: CROJPRLo6

Price: €41.95



CROCKPOT EXPRESS MULTICOOKER SEALING RING

[Read More](#)

SKU: CROJPRV52

Price: €29.95

10%

€18.95

10%



CROCKPOT RACK FOR EXPRESS COOKER

[Read More](#)

SKU: CROJPRV51

Price: €9.85



CROCKPOT 5.7L SLOW COOKER LID

[Read More](#)

SKU: CROLIDSP57

Price: €41.95



CROCKPOT SLOW COOKER 2.4L LID

[Read More](#)

SKU: CRO1424600050

Price: €41.95



CROCKPOT DURACERAMIC SLOW COOKER 6L LID

[Read More](#)

SKU: CRO14151000050

Price: €41.95



CROCKPOT STONEWARE 2.4L POT

[Read More](#)

SKU: CRO624099

Price: €25.95



CROCKPOT SLOW COOKER 4.7L LID

[Read More](#)

SKU: CROLIDSP47

Price: €41.95



CROCKPOT STONEWARE 4.7L POT

[Read More](#)

SKU: CROCP02000

Price: €41.95

INDEX

C

CROCKPOT 5.6L SLOW COOKER LID 8
CROCKPOT 5.7L AUTOSTIR LID 8
CROCKPOT 5.7L SLOW COOKER LID 9
CROCKPOT DURACERAMIC SLOW COOKER 6L LID 9
CROCKPOT EXPRESS MULTI COOKER 5.6L 2
CROCKPOT EXPRESS MULTICOOKER SEALING RING 8
CROCKPOT RACK FOR EXPRESS COOKER 8
CROCKPOT SLOW COOKER 2.4L DIGITAL BLACK (For 2) 5
CROCKPOT SLOW COOKER 2.4L LID 9
CROCKPOT SLOW COOKER 4.7L LID 10
CROCKPOT SLOW COOKER 7.5L SILVER (For 10) 4
CROCKPOT SLOW COOKER AUTO STIR 5.7L (For 6) 6
CROCKPOT SLOW COOKER BLACK/STAINLESS STEEL 5.7L (For 6) 6
CROCKPOT SLOW COOKER DIGITAL BLACK 4.7L (For 5) 7
CROCKPOT SLOW COOKER DIGITAL WITH HINGE 3.5L BEIGE & CHROME (For 4) 4
CROCKPOT SLOW COOKER DIGITAL WITH HINGE 3.5L SILVER & ROSE GOLD (For 4) 4
CROCKPOT SLOW COOKER DIGITAL WITH HINGE 4.7L (For 5) 5
CROCKPOT SLOW COOKER DURACERAMIC WHITE 5.0L (For 6) 5
CROCKPOT SLOW COOKER DURACERAMIC WHITE 6L (For 8) 6
CROCKPOT SLOW COOKER RED 3.5L (For 4) 6
CROCKPOT SLOW COOKER SIZZLE & STEW 3.5L (For 4) 4
CROCKPOT SLOW COOKER SIZZLE & STEW 6.5L (For 8) 3
CROCKPOT SLOW COOKER STEEL 3.5L (For 4) 5
CROCKPOT STONEWARE 2.4L POT 9
CROCKPOT STONEWARE 4.7L POT 10
CROCKPOT TIME SELECT SLOW COOKER SILVER 5.6L (For 6) 3
CROCKPOT TURBO EXPRESS MULTICOOKER 5.6L 2